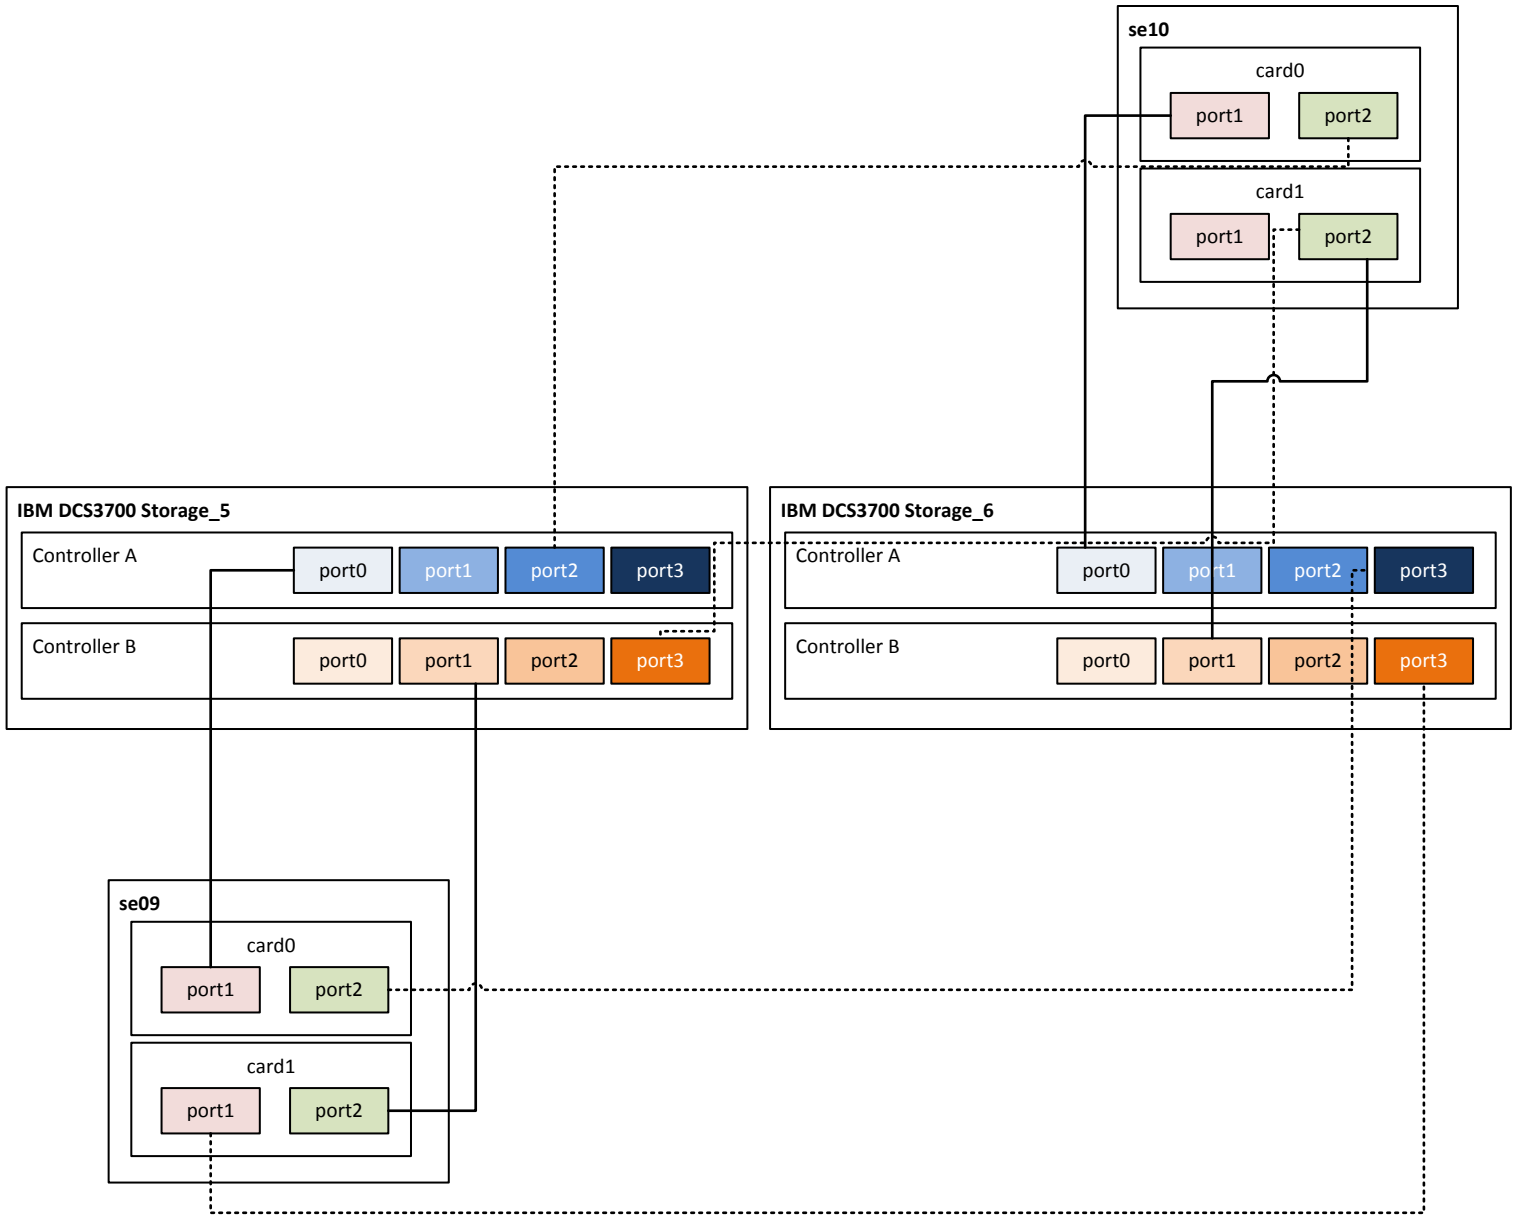
se10
card0
port1
port2
card1
port1
port2
IBM DCS3700 Storage_5
Controller A
port0
port1
port2
port3
Controller B
port0
port1
port2
port3
IBM DCS3700 Storage_6
Controller A
port0
port1
port2
port3
Controller B
port0
port1
port2
port3
se09
card0
port1
port2
card1
port1
port2

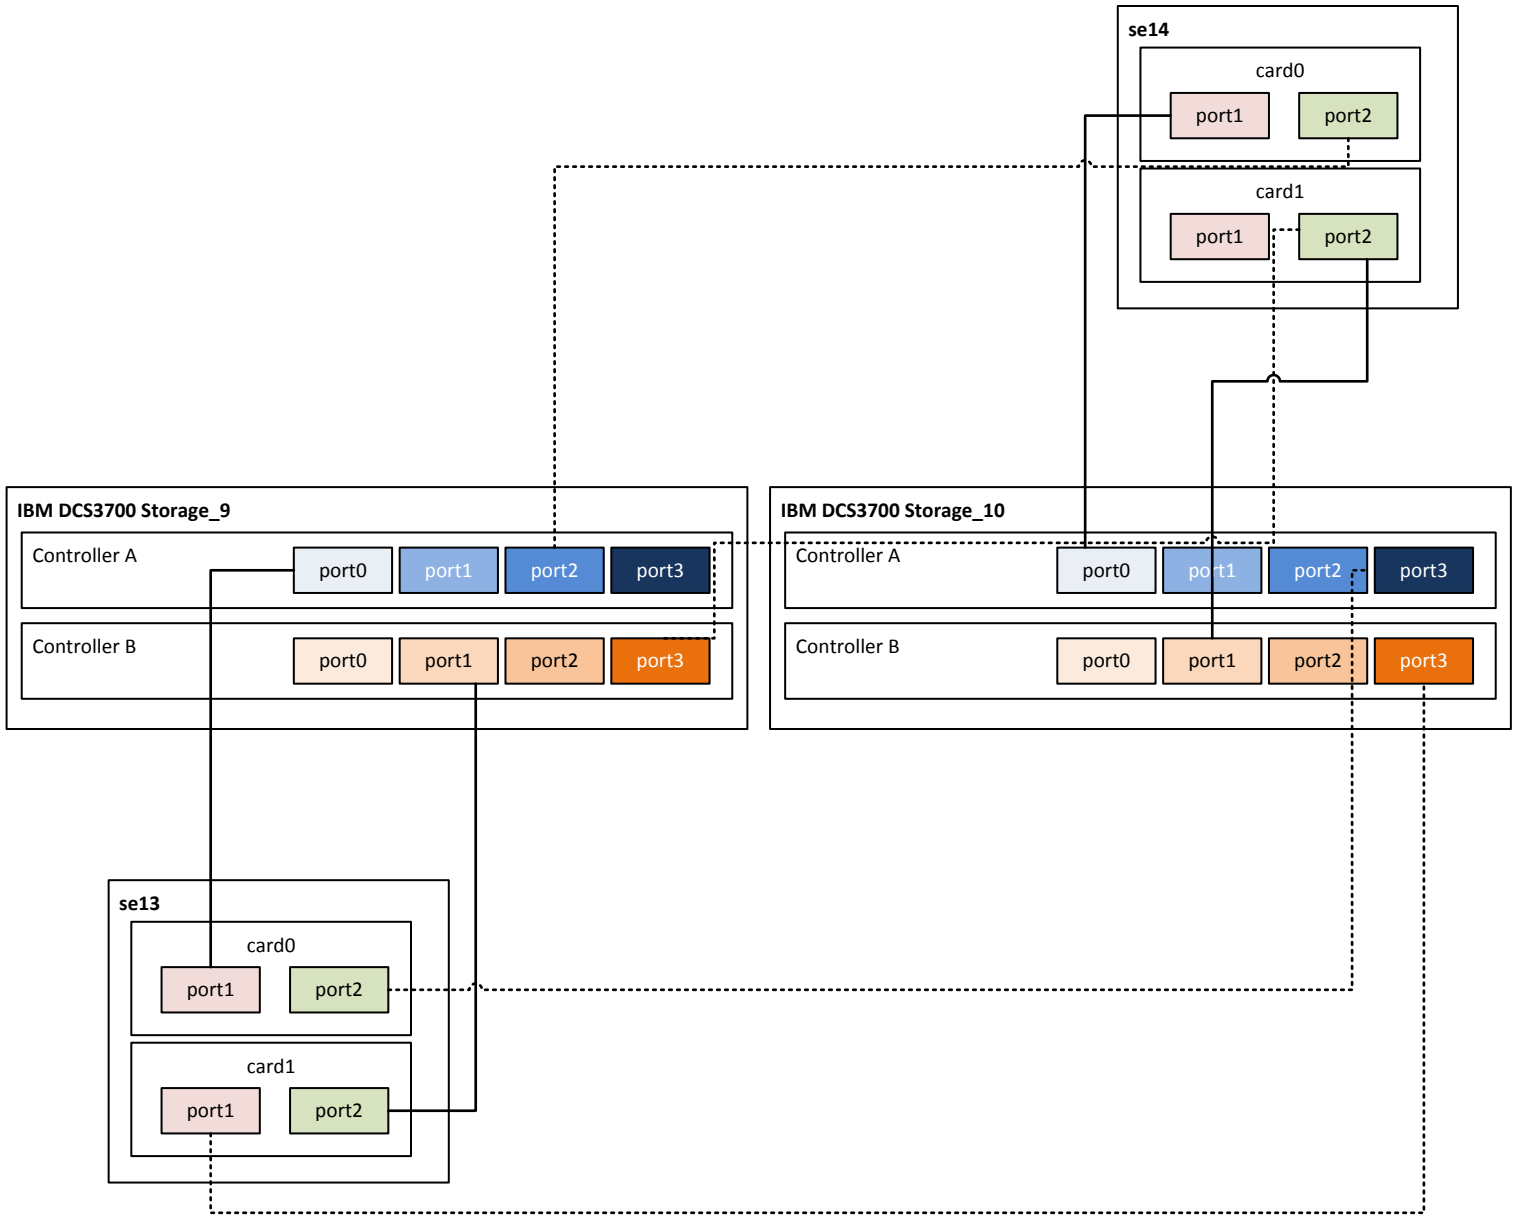
se14
card0
port1
port2
card1
port1
port2
IBM DCS3700 Storage_9
Controller A
port0
port1
port2
port3
Controller B
port0
port1
port2
port3
IBM DCS3700 Storage_10
Controller A
port0
port1
port2
port3
Controller B
port0
port1
port2
port3
se13
card0
port1
port2
card1
port1
port2